## LEAF SAP SAMPLING GUIDE **Eggplant**



#### Keep in mind!

- Avoid outer rows and first 20 feet of a row.
- Sample leaves with average leaf quality. Sample areas of abnormal growth separately.
- Sample consistently; avoid extreme weather etc.
- If leaves are wet at sampling lightly pat dry before shipping (moisture influences results).
- Sap Analysis data works best when used in progression. The more samples the better crop nutrient uptake can be illustrated and understood.
- Note fertilizer and irrigation times and application rates if possible.
- Sample either before or 3+ days after fertilizer/pesticides have been applied.

#### Sampling Instructions

Sample Time: Sample in the morning before 11 a.m. and temperatures less than 80 °F for adequate leaf tension and moisture. Avoid sampling in the rain. Store samples in cooler. Sample Size: Collect 80+ grams each of both new (young) and old leaves + petiole for a collected total of 160+ grams per sample set. Bag leaves separately labeled New and Old. <u>Initial Sampling:</u> Begin sampling when plants have 5+ fully expanded leaves. Sample oldest fully <u>leaf + petiole</u> in zip lock bag labeled NEW. Growth stage: vegetative

Sequential Samples: New and Old leaf sample set every 2+ weeks in combination with growth stages: vegetative, flower, fruit set, fruit fill

**NEW-** Youngest fully expanded <u>leaf + petiole</u> from the growing point of the plant. Place stacked <u>leaves + petiole</u> in zip lock bag labeled NEW.

### New leaf = newest yet fully developed leaf + petiole

**OLD-** Oldest still healthy and functional <u>leaf + petiole</u> typically the second or third lowest leaf from base of plant. Place stacked <u>leaves + petiole</u> in separate zip lock bag labeled OLD.


Old leaf = oldest yet still viable leaf + petiole

\*\*Do not mix varieties when sampling as this may cause variation in analyses\*\*

#### mewagelaboratories.com newagelabs newagelabs New Age Laboratories

# LEAF SAP SAMPLING GUIDE **Eggplant**



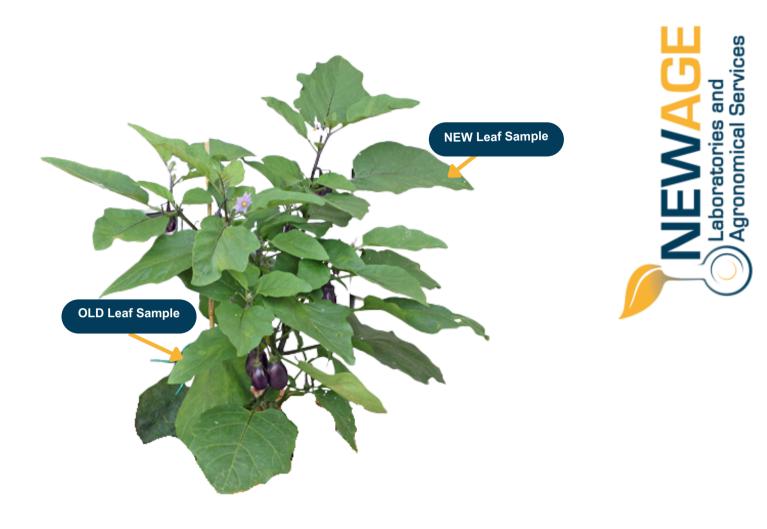

Keep samples cool. Ship overnight or 2-day on M/T/W (morning arrival time) with ice packs. Samples should not come into direct contact with ice packs. Let air out of bags before shipping.

All samples must be accompanied by a fully completed Sample Submission Form. Fillable version available on our website www.newagelaboratories.com.